




PRECISION GREENS ROOF TOP INSTALLATION (STYROFOAM BUILD UP)

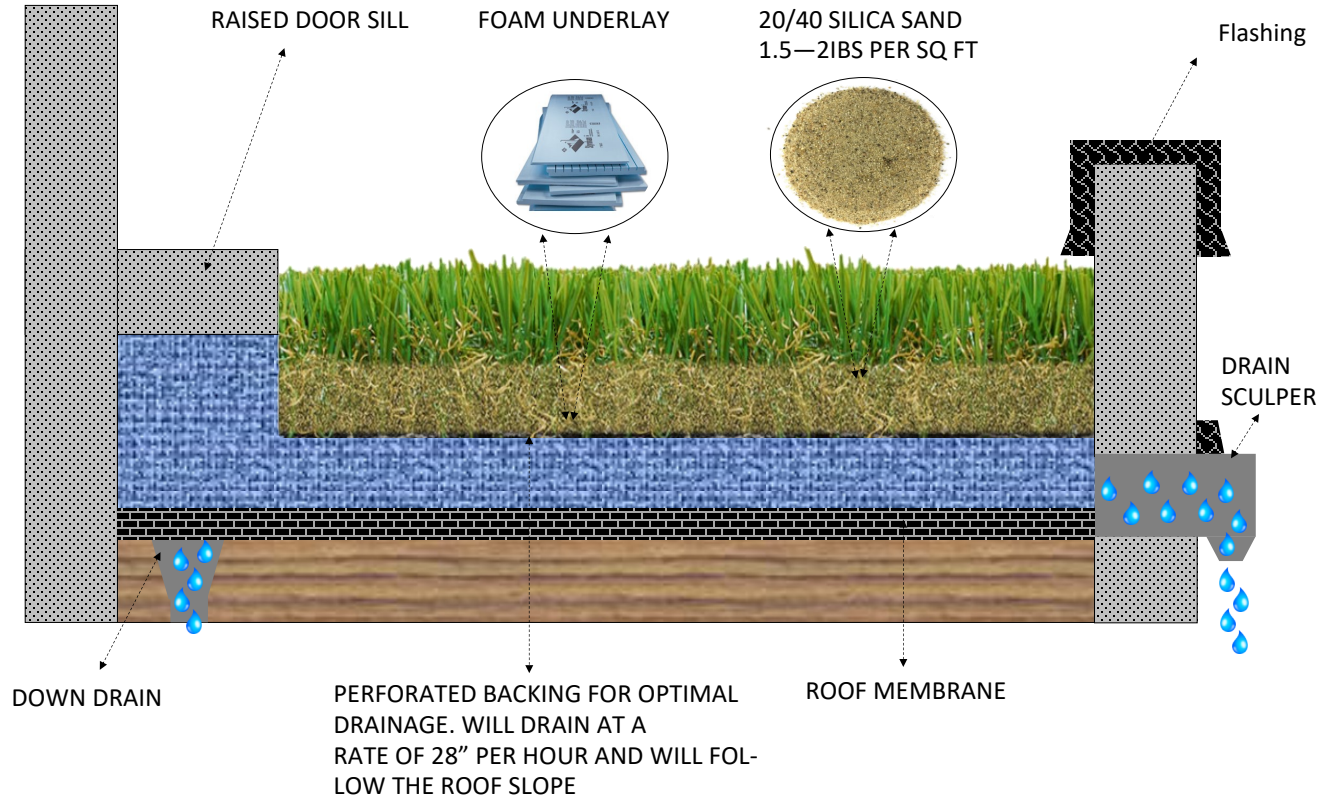

INSTALLATION STEPS:

1. CLEAR AREA OF ALL DEBRIS
2. DELIVER PRODUCT TO THE ROOF TOP
3. INSTALL 5' WIDE TURF CLOUD OVER THE ENTIRE AREA AND SEEM PICES WITH TUCK TAPE AND SECURE CORNERS WITH APPROVED ADHESIVE
4. INSTALL THE ARTIFICIAL GRASS, CUT TO SHAPE, AND SECURE CORNERS WITH APPROVED ADHESIVE
5. POWER BROOM GRASS TO ENSURE FIBERS ARE
6. EVENLY SPREAD 2 SEPARATE LAYERS OF INFILL; FIRST LAYER 1.5 IBS PER SQ FT AND POWER BROOM; SECOND LAYER 1 IBS PER SQ FT AND FINAL POWER BROOM
4. ONCE GRASS IS INSTALLED TO SPEC, SEEMED, AND INFILLED, SOAK THE ENTIRE AREA WITH WATER MAKING SURE ALL INFILL HAS SETTLED INTO THE BASE OF THE GRASS

NOTES:

1. REQUIRES MINIMUM OF THREE INSTALLERS
2. PLAN FOR CRANE AND TRAFFIC CONTROL SERVICES IF REQUIRED
3. ENSURE SUFFICIENT FALL PROTECTION FOR INSTALLERS
4. ONLY USE APPROVED ADHESIVE TO LAMINATE PRODUCTS
5. WATER WILL DRAIN WITH ROOF SLOPE



RESIDENTIAL LANDSCAPE SYSTEM
CASCADE ELITE—INSTALLED OVER AGGREGATE BASE

